



DVD PLAYER USER GUIDE

The remote for the DVD player can be borrowed at the main circulation desk. The player can play both regular DVDs as well as Blu-ray discs.



STEP 1.

Locate the Projector Display panel on the wall to your right. Select "BLU-RAY" and then "ON." **Note:** This is also where you will control the volume from.

STEP 2.

The screen should lower and the projector (on the ceiling) should turn on.

Wait for the indicator on the projector to turn solid green. It may take a few minutes to warm up before turning green.



STEP 3.

The DVD player is in the black AV panel, located on the left wall when facing the projector screen. Press the "OPEN/CLOSE TRAY" button on the player. Insert disc in the tray and close.

TIP: If you don't see the DVD projected on the wall, return to the Projector Display panel and press "BLU-RAY" followed by "ON" again.



STEP 4.

Use the remote to hit play and make menu selections. Remember to point it at the DVD player.



REMINDER

When done, please:

- 1) Remove your disc from the player.
- 2) Turn off the player via the power button.
- 3) Turn off the projector via the Projector Display panel.
- 4) Return the remote.